



# Asus U47VC-DS51 Keyboard Replacement

How to replace the entire keyboard on the asus laptop.

Written By: Brady Roberson



## INTRODUCTION

This guide demonstrates how to replace the keyboard. It is one solid piece with Three ZIF connectors.

---



### TOOLS:

- [Spudger](#) (1)
-


## Step 1 — Keyboard




- Using the black spudger, insert its flat end between the crevice where the color changes from grey to black.

 The keyboard is very tightly secured.

- Carefully ease the spudger's end along the crevice, going around the entire frame.

 The back connectors are short, so be careful when lifting.


## Step 2

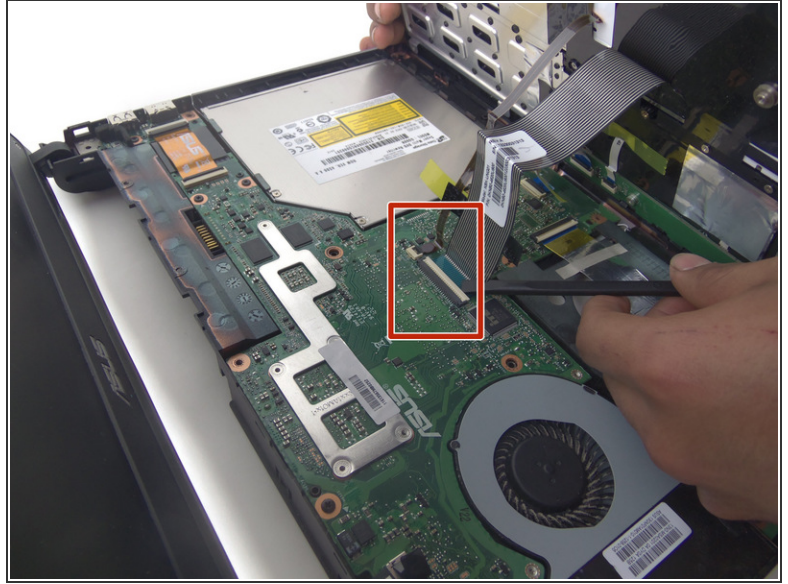

- Lift the keyboard from the front where it is closest to the screen.
- Disconnect the large and small ZIF connectors attached to the motherboard by flipping the light-colored part of the switch.



## Step 3

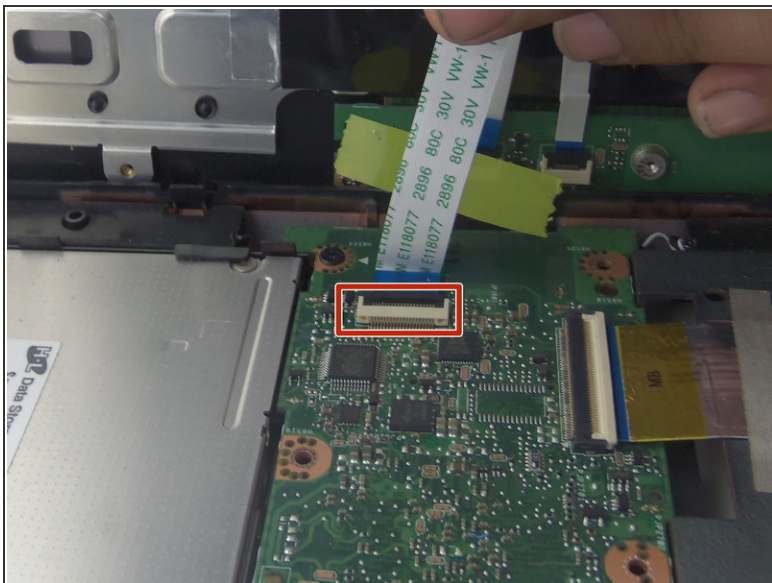

- Remove the third and last ZIF connector on the motherboard by flipping up the dark-colored part of the switch.
- Now, the component should come completely free.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:32:29 PM.